



T60 Pro

Quick Guide V1.0

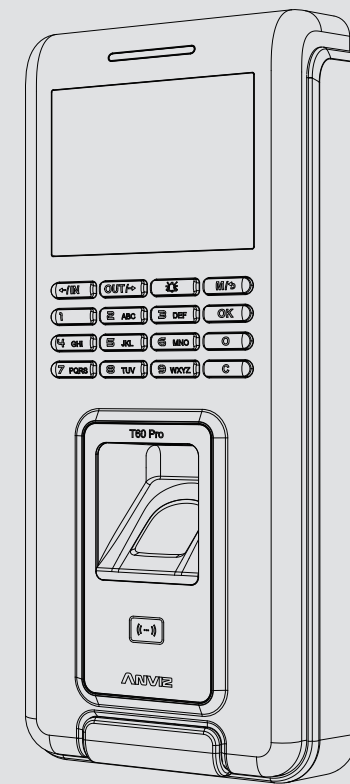


www.anviz.com

1. Packing list

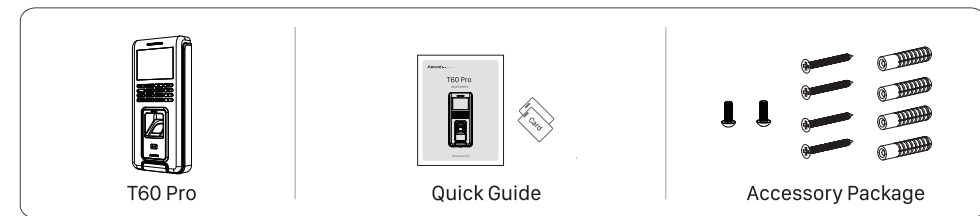

2. Installation Diagram & Installation Step

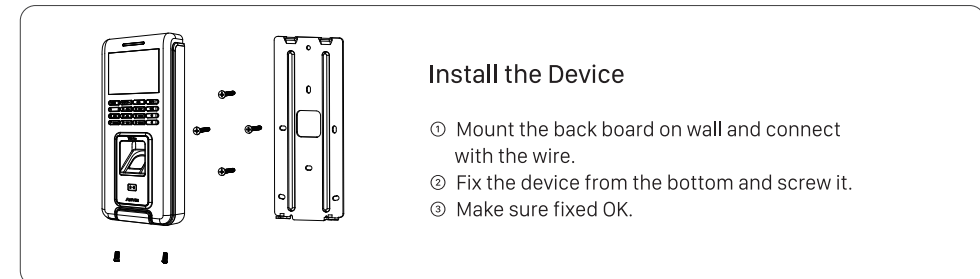

3. Interface Description

Optional:4G

Relay State:

Power Over Ethernet & TCP/IP Communication Port door bell switch

UP: 10 BELL+, 10 BELL-PWR
Down: 10 GND

USB Host


PIN	Definition	
1	GND	Power
2	12V	
3	NC2	Relay2
4	COM2	
5	NO2	
6	NC1	
7	COM1	Relay1
8	NO1	
9	BEL-	Door Bell
10	BEL+	
11	R4B	RS485
12	R4A	
13	W10	Wiegand Input
14	W11	
15	GND	
16	W00	Wiegand Out
17	W01	
18	GND	
19	OPEN	Exit Button
20	D/M	Door Sensor

Important Notice


Please follow the wiring diagram as it is displayed. Damaged products due to improper wiring are not covered under the product warranty.

4. Power Over Ethernet Supply



Power Over Ethernet provide device network communication and the power is enough for both device and lock working. Total load should not exceed 12.95W when using POE supply for T60 Pro and directly drive the electric lock to prevent damage to device.

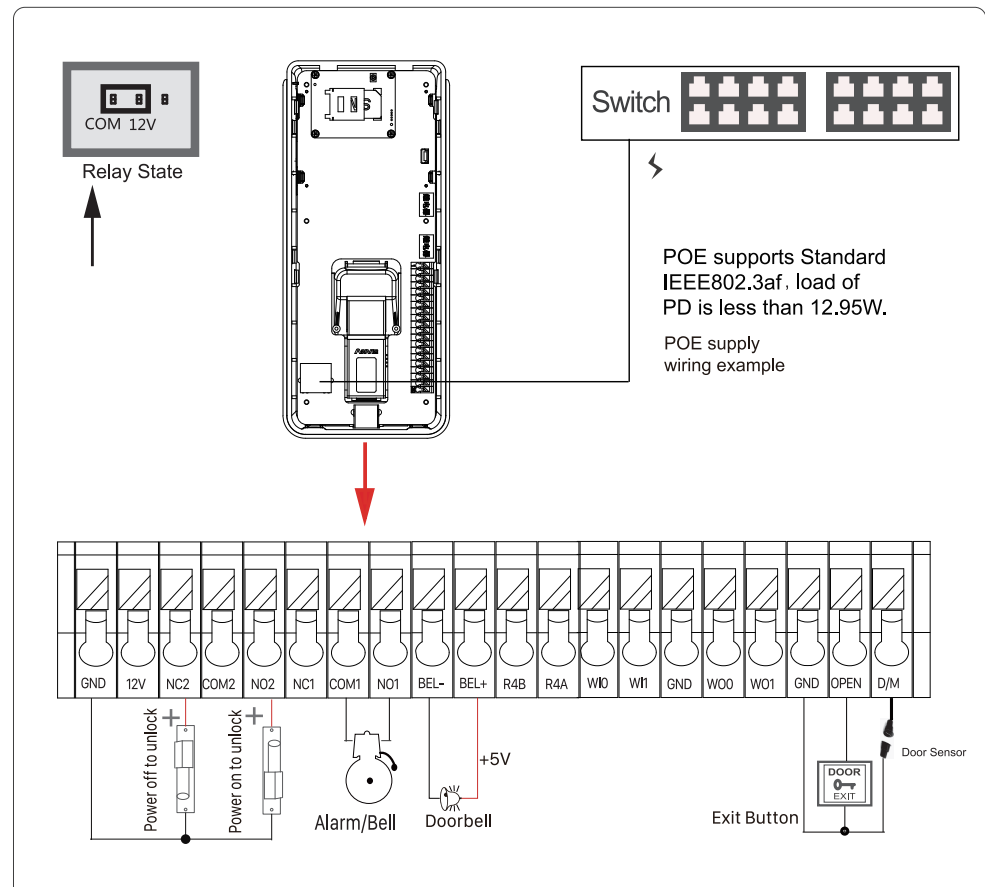

5. T60 Pro & Anviz SC011

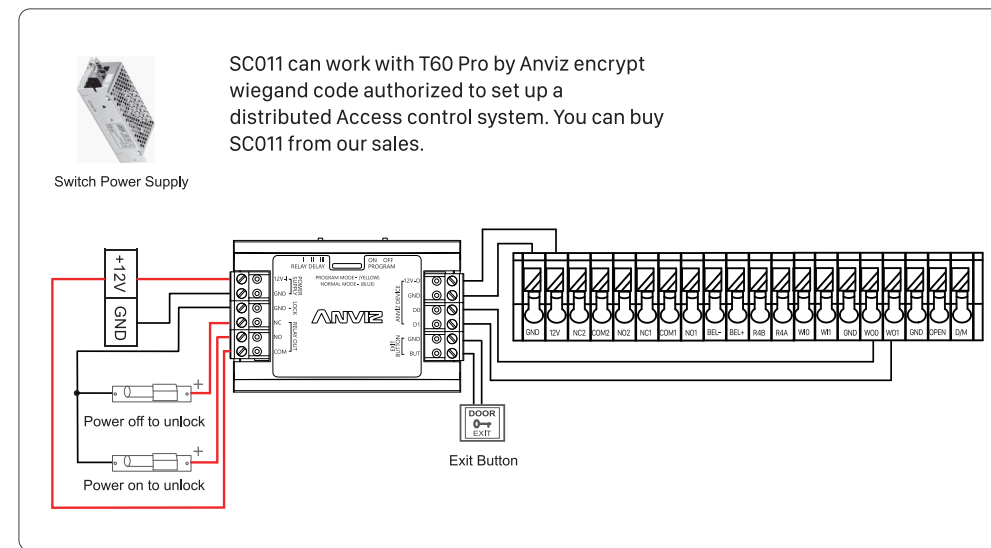

6. T60 Pro & Access Control Power Supply

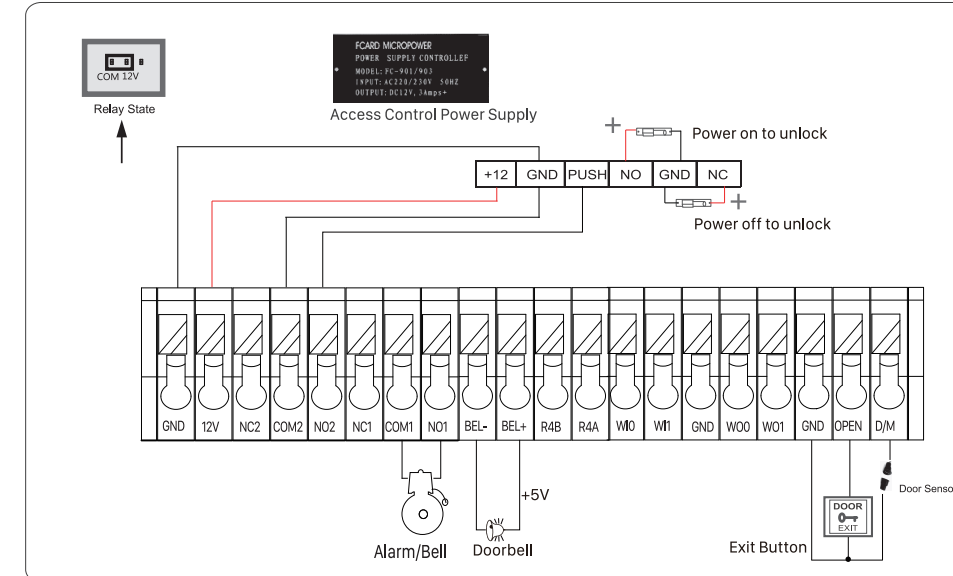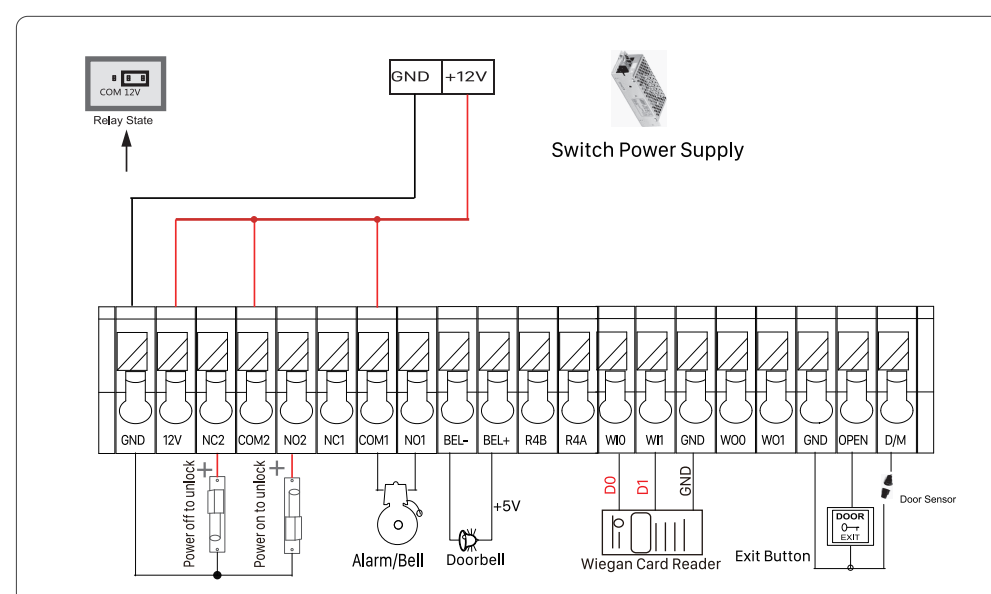

7. Operation Guide

1. Basic Settings

Press [M] key and input "0" as ID and "12345" as password to log in Menu.

Go to Setting/Time menu to set up date and time.

Browser the Setting/Device menu to view or edit the Device ID and Admin PIN Code.

Tips
*0/12345 is the default Admin ID and password. You can change to your own the password or set other user as Admin later.



In order to protect the environment, Anviz has decided to go "CD Free" campaign since June 1st 2019. We will provide QR code for you to download the electronic documents to make sure that you understand how to install and use Anviz devices.



<https://bit.ly/2WugbYp>

Dropbox



<https://bit.ly/2Vn0wh6>

Google



<https://bit.ly/2J9qA95>


Anviz

Anviz brand and product are trademarked and protected under law of the United States. Unauthorized use is prohibited.

For more information, please visit www.anviz.com, or send email to sales@anviz.com for more help.

©2019 Anviz Global Inc. All Rights Reserved.

2. Add Users

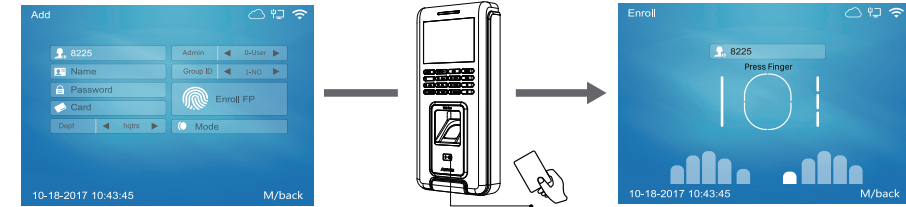


Go to User -- Add menu. Must fill the User ID and press "OK" jump to next text bar to fill the user information.

Swipe the card at card mark area, and the device will get the card number, and then move to "Enroll FP" section and click [OK] key.


Scan the same finger three times to enroll the fingerprint.

3. Verity the Fingerprint

• Correct Method:

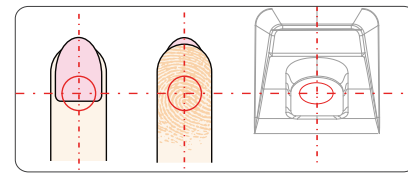


Place Finger in the center of the sensor.

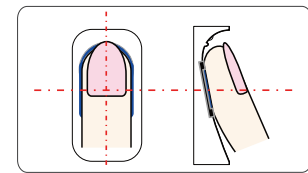


Place Finger flatly and smoothly on the sensor.


• Incorrect Method:

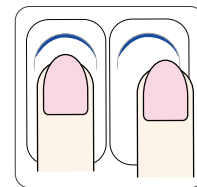

Finger not placed on the center of the sensor.

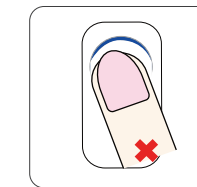

Finger placed inclined.

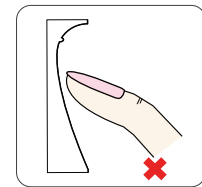

Use of fingertip.

4. Character Input Method


When you need to edit your name, you need to enter characters. Here are the steps for entering characters:

- * Use the left and right move keys to move the cursor to the area you want to edit.
- * Press the [Fn] key on the keyboard and a character input window "Aa" will be displayed at the bottom of the screen.
- * Press [IN] on the keyboard, the letter window will switch between "Aa", "123", ".!?" and "Picture", you can select the window to enter Letters, numbers, or special characters.

8. Communication Settings

- * Switch to Network\Internet menu, select Ethernet, 4G (optional)
- * Switch to network\communication mode, select server or client mode
- * Switch to the network menu and set the Ethernet parameters according to your network environment.
- * On the management computer, spell the IP address of T60 Pro to ensure that it can be worked together.
- * When the device has WiFi function, it is suggested that the device should be installed as far away from the metal parts as possible. The distance between the installation location of the device with WiFi function and the router should be within 30m.


1. WiFi Settings

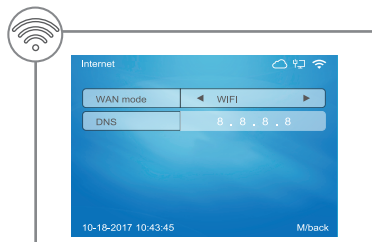


Go to Network/Internet menu to set up WAN mode as "WIFI" and input the DNS server IP address.



Device will search WIFI network automatically. Select the WIFI network and input password.

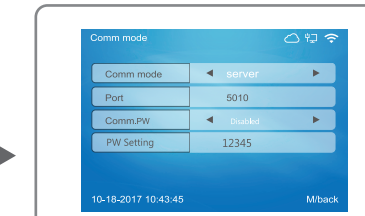


Go to Comm mode menu to select Server or Client mode.

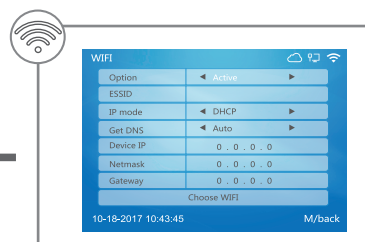


Go to WIFI menu to change TCP/IP settings, then select "Choose WIFI" to go to the second window.


2. Ethernet Settings

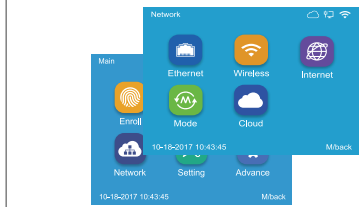


Go to Network menu.

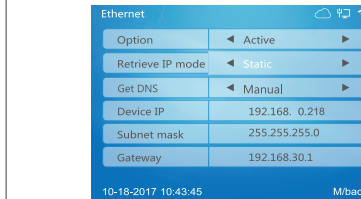

Go to Ethernet menu to change TCP/IP settings.

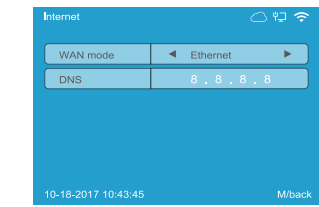

Go to Internet menu to set up WAN mode as "Ethernet" and input the DNS server IP address.

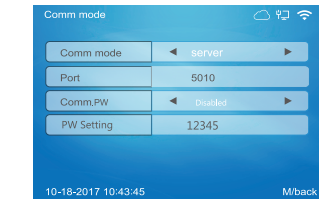


Go to Comm Mode menu to select Server or Client mode.

9. Working with Management Software


1. Working with Management Software

Scan the QR code on user manual to install the software.

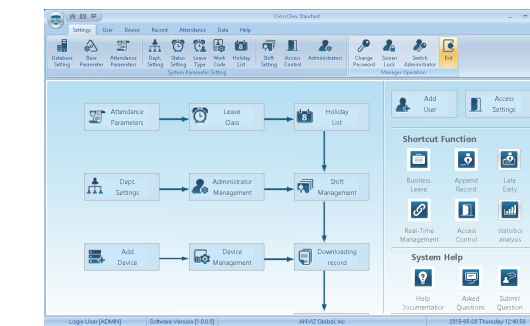

How to connect the Device with Software?

Method One: Connect to Network

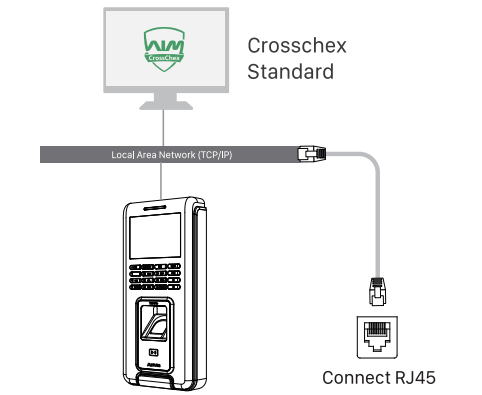

Method Two: Connect to Cloud

W Pro series can be managed by Anviz cloud management platform Crosschex cloud. For more details, please refer to <https://www.anviz.com/product/crosschex/cloud.html>.

2. Enable Communication between Device and the Management Software CrossChex

- Turn on management software CrossChex.
- Go to Device tab. Search and Add the device to management software CrossChex.
- Click Synchronize Time button to communicate with Device. If Synchronize is successful, the device icon will turn to blue.

3. The Management Software CrossChex Features

- Device\Backup User: Download user info from Device to CrossChex.
- Device\Download Records: Download records from Device to CrossChex.
- User\Modify: Edit name or other user info. Then click "Upload User" to Upload user info to device.
- Record\Search: Search and view the records.
- Attendance: Calculate, Search results and Generate reports.
- Data\Backup Database: Backup Database.
- Setting\Shift: Set up Time Table and Scheduling.
- Device\Device Parameter: Set up device. Clear records on Device or Reset Device to factory settings.



Scanning QR code to download CrossChex software