

M-Bio

Portable Bluetooth Enabled Fingerprint & RFID Device

Quick Guide v1.1


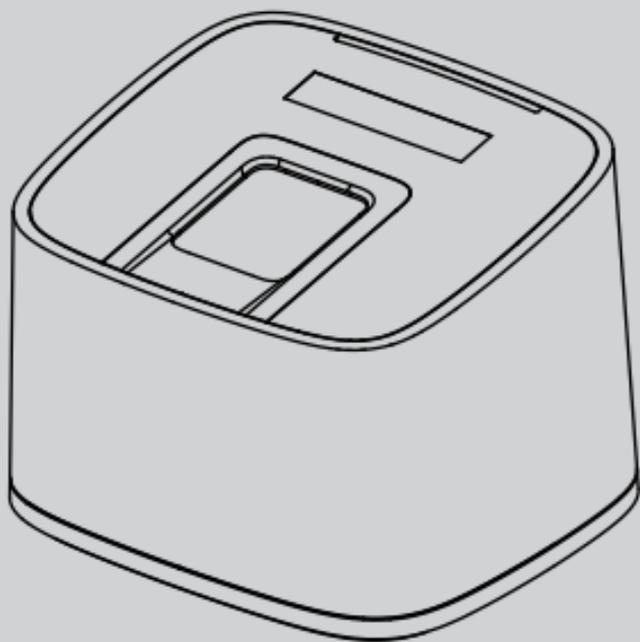


Illustration for Placing Finger

■ Correct Method

(Straighten your finger and then place it on the sensor
Ensure the finger is flat and covers the entire sensor)

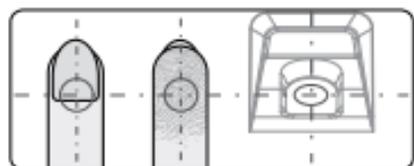

Always place finger in the center of the sensor.



Try to place your finger covers the entire sensor.

■ Incorrect Method



DO NOT place the finger over an excessive angle.



DO NOT place finger away from the center of the sensor.



DO NOT take off finger during the verification process.



DO NOT place finger at an angle.




DO NOT just use
your fingertip.




DO NOT slide your finger
during the fingerprint
verification process.

Appearance

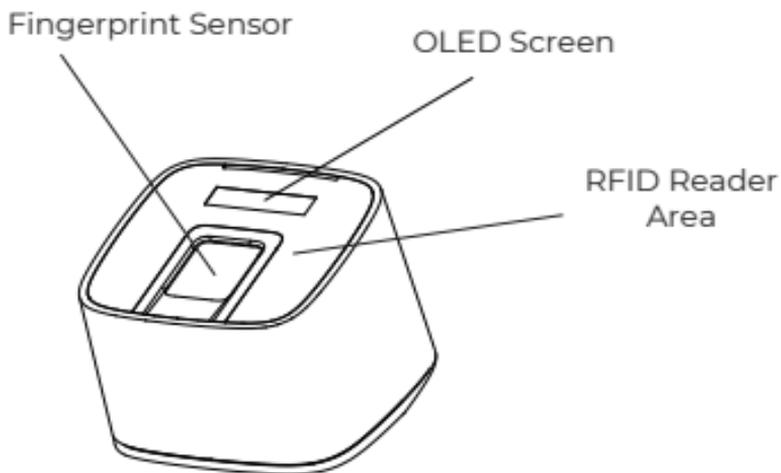

Power
Button

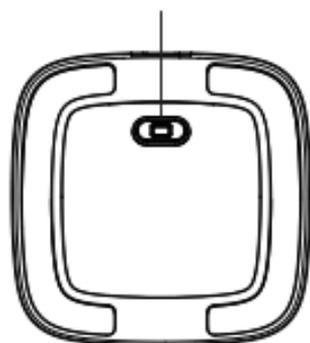


Power Over USB Port

WiFi AP Mode

Date and Time

Battery

Bluetooth

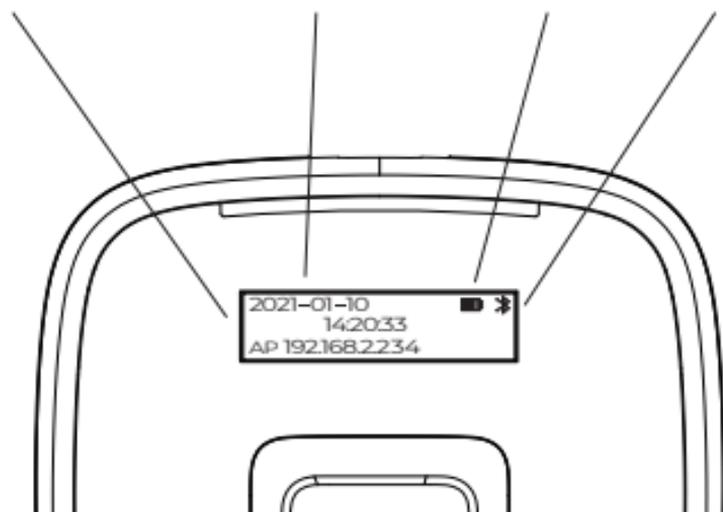


Operation Guide

▪ IMPORTANT:

M-Bio is suitable for USB 5V power supply only. Plug in the power the device will automatic power on.

▪ Register User:

Add One Fingerprint per User Only:

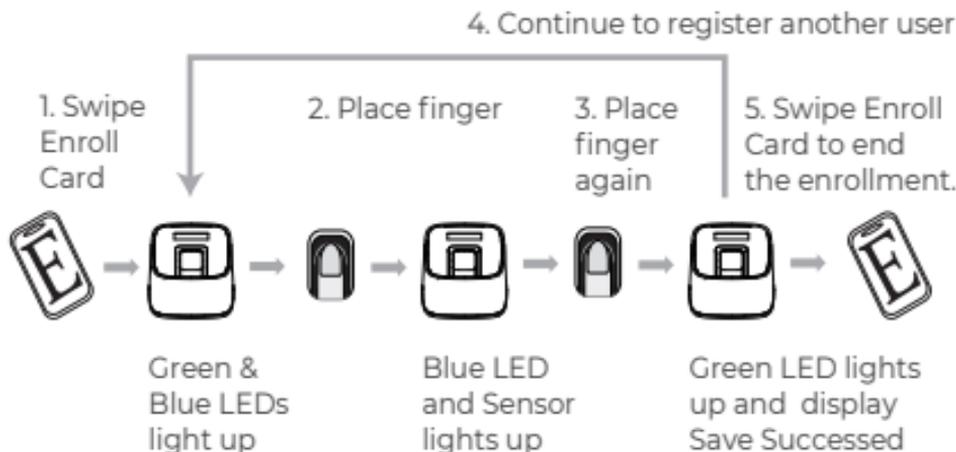


1. After finish enrolling current user, the device will continue to register another user.

2. After finish enrollment, please swipe enroll card to exit enroll status.

Operation Guide

▪ Add Card Only:

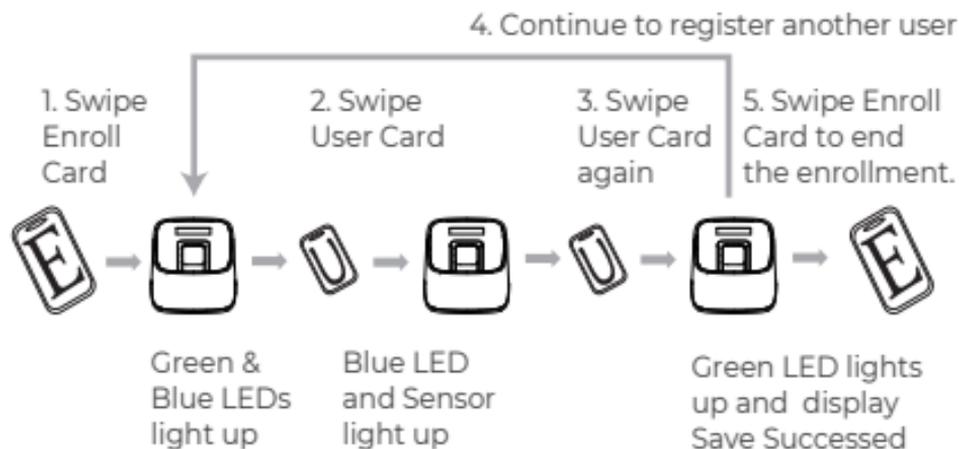

Notice:


During the device in the register mode without any operation for 3 sec the M-bio will back to the normal mode.

Operation Guide

▪ Delete User:

Delete Fingerprint or Card

After delete one user, you can continue to delete another user or swipe Delete Card to exit delete mode.

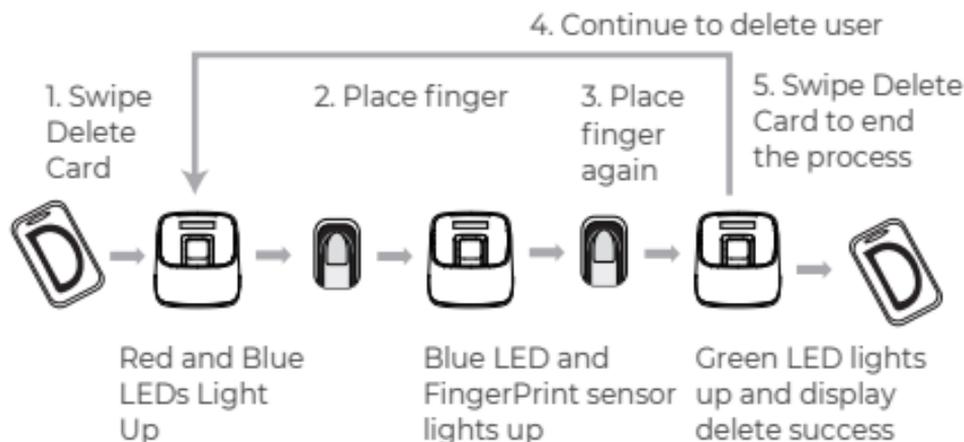


Notice:

During the device in the delete mode without any operation for 3 sec the M-bio will back to the normal mode.

Operation Guide

▪ Delete Card:

After delete one user, you can continue to delete another user or swipe Delete Card to exit delete mode.

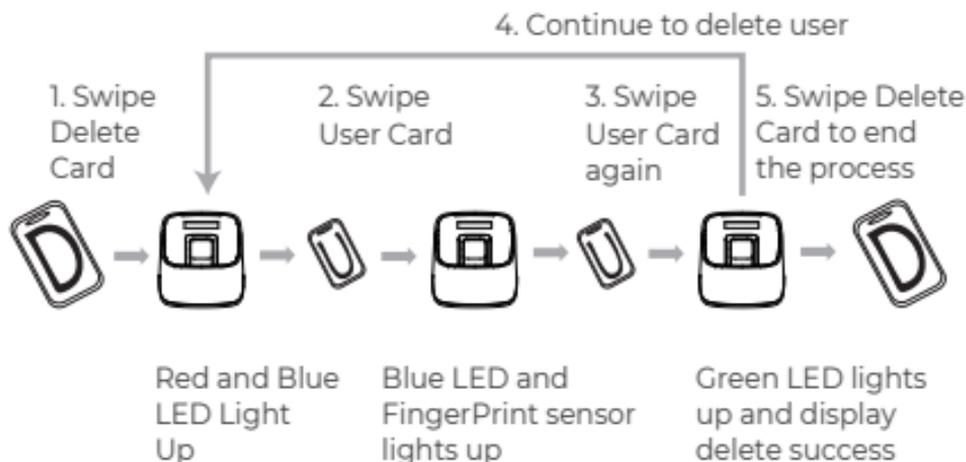

Notice:

When you swipe card on M-Bio, Red LED flashing with long beeps means the card does not exist in the device.

Login WebServer



Login to M-bio Webserver to manage the device.

M-bio is default with WIFI AP function.

Please connect M-Bio WIFI AP

WIFI SSID: M-bio

Default Password: 123456789



Not secure | 192.168.2.234

ANVIZ
Login Web Server

User Name

Password


Login Reset

Please input the default address (192.168.2.234) in the browser to login Webserver.

Account: admin


Default Password: 12345

User Register By WebServer

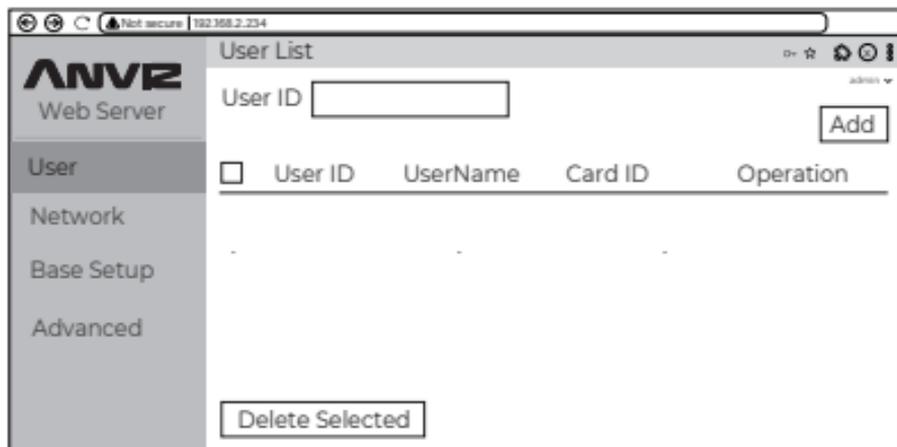

The screenshot shows the 'User List' page of the ANVR Web Server. The browser address bar shows '192.168.2.234'. The page has a sidebar with navigation options: 'User' (selected), 'Network', 'Base Setup', and 'Advanced'. The main content area is titled 'User List' and contains a search box for 'User ID' with an 'Add' button to its right. Below this is a table with columns: 'User ID', 'UserName', 'Card ID', and 'Operation'. The table is currently empty. At the bottom of the page, there is a 'Delete Selected' button.

Click the "Add" Button at top right of the web to register User.

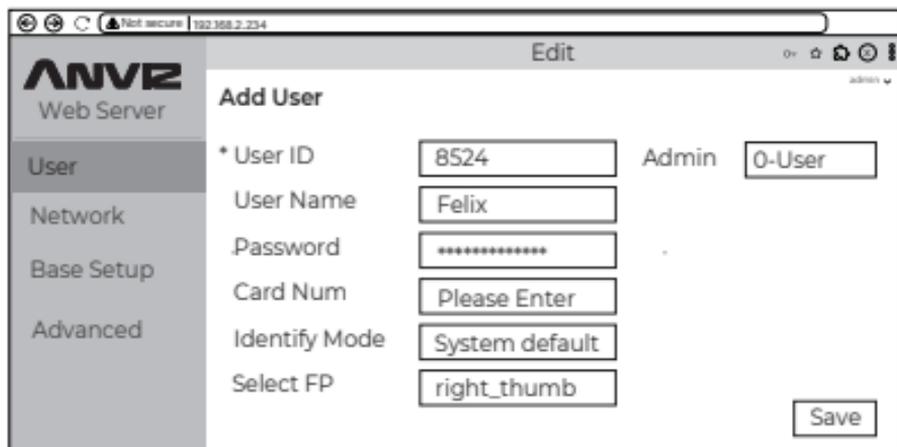

The screenshot shows the 'Add User' page of the ANVR Web Server. The browser address bar shows '192.168.2.234'. The page has a sidebar with navigation options: 'User' (selected), 'Network', 'Base Setup', and 'Advanced'. The main content area is titled 'Add User' and contains several input fields: '* User ID' (8524), 'User Name' (Felix), 'Password' (masked with asterisks), 'Card Num' (Please Enter), 'Identify Mode' (System default), and 'Select FP' (right_thumb). There is also an 'Admin' dropdown menu set to '0-User'. A 'Save' button is located at the bottom right of the form.

Fill the employee's information and click "Fingerprint Enroll" to enroll user's finger on the M-Bio device.

ANVIZ



Call

+1-855-ANVIZ4U | +1-855-268-4948
MON-FRI 5AM-5PM Pacific



Email

support@anviz.com
24 Hours Answer



Text

+1-408-837-7536
MON-FRI 5AM-5PM Pacific



Community

Join community.anviz.com
if you have any question or suggestion to share

Scan and download software



CrossChex
Mobile App



CrossChex
Standard

Google Drive Anviz Drive